




## IMPRESSA J5 – Quick Reference Guide

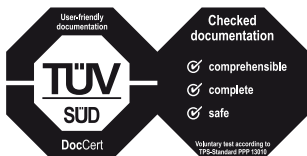


The "IMPRESSA Manual" together with these short instructions "IMPRESSA J5 – Quick Reference Guide" has been awarded the seal of approval by the independent German Technical Inspection Agency, TÜV SÜD, due to its easy-to-understand style, its thoroughness and coverage of safety aspects.



These short instructions do not replace the “IMPRESSA J5 Manual”. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

## Switching on

When the IMPRESSA is switched on, a prompt to perform a rinse operation automatically appears.

**Precondition:** Your IMPRESSA is switched on at the power switch and the On/Off button  is illuminated (standby).

- ▶ Press the On/Off button to switch the IMPRESSA on.

**HEATING**


**PRESS RINSE**, the maintenance button  lights up.

- ▶ Place a receptacle under the coffee spout.

-  ▶ Press the maintenance button.

The machine will rinse itself, stopping automatically.

**READY** appears on the display. Your IMPRESSA is ready to use.

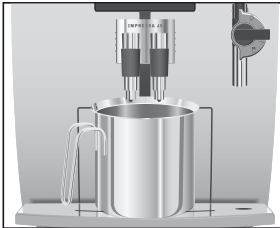



## Cappuccino

A classic Italian recipe. The Cappuccino is made up of one-third each of Espresso, hot milk and milk foam. The finishing touch is a sprinkling of cocoa powder.

**Precondition:** The Professional Cappuccino Frother is installed.


- ▶ Take the milk pipe out of the Welcome Pack.
- ▶ Take the protective cap off the Professional Cappuccino Frother.
- ▶ Attach the milk pipe to the nozzle.
- ▶ Insert the other end in a milk carton/bottle or connect it to a milk container.
- ▶ Place a cup under the Professional Cappuccino Frother.

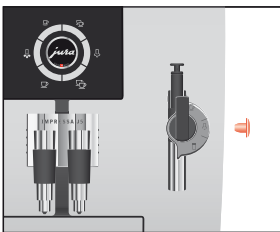

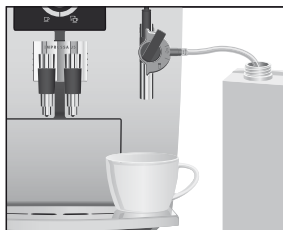

- ▶ Turn the selection lever of the nozzle to the milk foam position ☕.
- ☞ ▶ Press the steam button.  
**HEATING**  
**READY** appears as soon as the IMPRESSA has heated up.
- ☞ ▶ Press the steam button.  
**STEAM**, the milk foam is being prepared.  
The operation stops automatically after reaching the pre-set amount of steam.

- i** The milk foam preparation can be interrupted at any time. To do this, press any button.
- i** While milk foam is being prepared, you can change the pre-set amount of water by turning the rotary switch.
- i** You can continue with preparing milk foam **within approx. 40 seconds**.

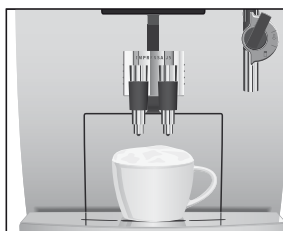

- ▶ Move the cup under the coffee spout.
- ☞ ▶ Press the 1 Espresso button.  
**i ESPRESSO** appears on the display. After this, the strength is briefly displayed.  
The pre-set amount of water flows into the cup.  
Drink preparation stops automatically. **READY** appears on the display.







To ensure that the Professional Cappuccino Frother works perfectly, you should rinse and clean it regularly. You can find more information under "Maintenance – Professional Cappuccino Frother".

## Using and activating filter


Your IMPRESSA no longer has to be descaled if you are using CLARIS plus filter cartridges.

- i** Perform the 'Insert filter' operation without interruptions. This will ensure that your IMPRESSA always produces its best.
- i** After two months, the filter will cease to work. Monitor the elapsed time as shown on the date plate on the cartridge holder.

**Precondition:** **READY** appears on the display.

-  ▶ Keep the rotary switch pressed until **RINSE** appears on the display.
-  ▶ Turn the rotary switch until **FILTER -** appears.
-  ▶ Press the rotary switch to enter the programme item. **NO -** appears on the display.
-  ▶ Turn the rotary switch until **YES ✓** appears.
-  ▶ Press the rotary switch to confirm this setting. **OK** appears briefly on the display to confirm the setting. **INSERT**, the maintenance button  lights up.
  - ▶ Remove the CLARIS plus filter cartridge and the filter cartridge extension from the Welcome Pack.
  - ▶ Stick the extension on top of the filter cartridge.
  - ▶ Remove the water tank and empty it.
  - ▶ Lift the cartridge holder and insert the filter cartridge into the water tank, applying light pressure.
  - ▶ Close the cartridge holder. It will click into place audibly.
  - ▶ Fill the water tank with cold, fresh mains water and reinsert.
  - ▶ Place a receptacle (at least 500 ml) under the Professional Cappuccino Frother.



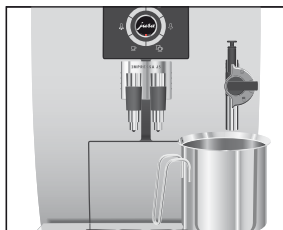

- ▶ Turn the selection lever of the nozzle to the STEAM position ☞ .
- ⚠ ▶ Press the maintenance button.  
**FILTER RINSING**. Water will flow out at the nozzle.
- i** You can interrupt the rinsing of the filter at any time by pressing any button.
- i** The water may be slightly discoloured. This is not harmful to health, nor does it affect the taste.

Filter rinsing stops automatically after approx. 500 ml. **HEATING** appears on the display, and then **READY** appears. The filter is now activated.


## Changing the filter

- i** After 50 litres of water have flowed through, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.
- i** After two months, the filter will cease to work. Monitor the elapsed time as shown on the date plate on the cartridge holder.
- i** If the CLARIS plus filter cartridge is not activated, you will not be prompted to change the filter.

**Precondition:** **FILTER / READY** appears on the display, and the maintenance button lights up.

- ⚠ ▶ Press the maintenance button.  
**CHANGE**
- ▶ Remove the water tank and empty it.
- ▶ Open up the cartridge holder and remove the old CLARIS plus filter cartridge and the extension piece.
- ▶ Stick the extension on top of a new CLARIS plus filter cartridge.
- ▶ Insert the filter cartridge into the water tank with light pressure.
- ▶ Close the cartridge holder. It will click into place audibly.
- ▶ Fill the water tank with cold, fresh mains water and reinsert.



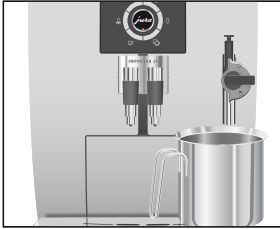

- ▶ Place a receptacle (at least 500 ml) under the Professional Cappuccino Frother.
- ▶ Turn the selection lever of the nozzle to the STEAM position ☞.
- ☸ ▶ Press the maintenance button.  
**FILTER RINSING**. Water will flow out at the nozzle.
- i** You can interrupt the filter rinsing at any time. To do this, press any button.
- i** The water may be slightly discoloured. This is not harmful to health, nor does it affect the taste.

Filter rinsing stops automatically after approx. 500 ml.  
**HEATING** appears on the display, and then **READY** appears.

## Clean machine

After 200 coffee preparations or 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

### CAUTION


If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.


- ▶ Use only original JURA care products.

- i** The cleaning programme only lasts about 15 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from your stockist.

**Precondition:** **CLEAN / READY** appears on the display, and the maintenance button ☸ lights up.

- ☸ ▶ Press the maintenance button.  
**EMPTY TRAY**
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
**PRESS RINSE** - The maintenance button ☸ lights up.

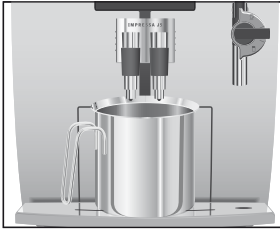

- ▶ Place a receptacle (at least 500 ml) under the coffee spout.
- ▶ Press the maintenance button.
  - CLEANING** - Water flows out of the coffee spout.
  - The process is interrupted - **ADD TABLET**.
- ▶ Open the cover of the filler funnel for pre-ground coffee.
  - ▶ Insert a JURA cleaning tablet into the filler funnel.
  - ▶ Close the cover of the filler funnel.
  - PRESS RINSE** - The maintenance button  lights up.
- ▶ Press the maintenance button.
  - CLEANING**
  - Water flows out of the coffee spout several times.
  - The process is interrupted - **EMPTY TRAY**.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
  - The cleaning operation is now complete. The cleaning operation is now complete.

## Descal machine



The IMPRESSA builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the degree of hardness of your water.

---

If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
  - ▶ Rinse the descaling agent off with clean water. Should you get any descaling agent in your eye, see a doctor.
- 

### CAUTION

If the wrong descaling agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▶ Use only original JURA care products.
- 

### CAUTION

If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling program to run to the end.
- 

### CAUTION

If the descaling agent comes into contact with sensitive surfaces, damage cannot be ruled out.

- ▶ Clean up any splashes immediately.
- 

- i** The descaling programme lasts approx. 40 minutes.
- i** JURA descaling tablets are available from your stockist.
- i** If you use a CLARIS plus filter cartridge and this is activated, you will not be prompted to change the filter.

**Precondition:** **DE-SCALE / READY** appears on the display, and the maintenance button  lights up.




-  ▶ Press the maintenance button.

**EMPTY TRAY**


- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

**PRODUCT IN TANK**

- ▶ Remove the water tank and empty it.

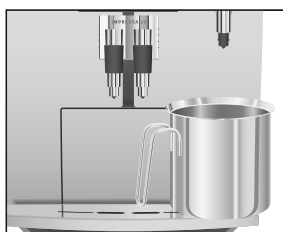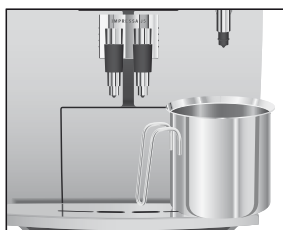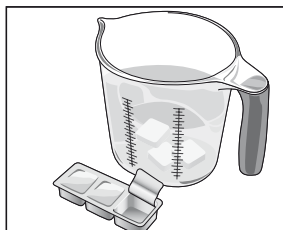

- ▶ Completely dissolve the contents of one blister (3 JURA descaling tablets) in a container that holds 500 ml of water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it in the machine.

**PRODUCT IN TANK** - The maintenance button  lights up.

- ▶ Remove the nozzle.
- ▶ Place a receptacle (at least 500 ml) under the Connector System®.

-  ▶ Press the maintenance button.

**DE-SCALING**

This causes water to flow out of the Connector System®. The maintenance button blinks during the descaling operation.

The operation stops automatically - **EMPTY TRAY**.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- ▶ Empty the container under the Connector System®.

**FILL WATER TANK**

- ▶ Rinse the water tank thoroughly and fill it with cold, fresh mains water.
- ▶ Put the water tank back in.

**PRESS RINSE** - The maintenance button  lights up.

- ▶ Place a container under the Connector System®.

-  ▶ Press the maintenance button.

This causes water to flow out of the Connector System®. The operation stops automatically - **EMPTY TRAY**.

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
- ▶ Replace the nozzle.

The descaling operation is now complete.

The IMPRESSA heats up and is ready for use again.



- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.


## Rinse Professional Cappuccino Frother

To ensure that the Professional Cappuccino Frother works perfectly, you should rinse it with water **after every** milk preparation.




**i** The IMPRESSA will not prompt you to rinse the Professional Cappuccino Frother.

- ▶ Remove the milk pipe from the milk carton/bottle or the milk container.
- ▶ Fill the receptacle with 250 ml of fresh water and immerse the milk pipe in it.
- ▶ Place a receptacle under the Professional Cappuccino Frother.
- ▶ Turn the selection lever to the milk  or milk foam  position.

 ▶ Press the steam button.

**HEATING**

**READY**

 ▶ Press the steam button again.

**STEAM** - The nozzle and pipe are rinsed.

- ▶ Press any button as soon as clean water flows into the cup.

## Clean Professional Cappuccino Frother

To ensure that the Professional Cappuccino Frother works perfectly, you should clean it **daily** when you have been preparing milk.

### CAUTION

---



If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▶ Use only original JURA care products.
- 

**i** The IMPRESSA will not prompt you to clean the Professional Cappuccino Frother.

**i** The JURA Auto-Cappuccino Cleaner is available from your stockist.



- ▶ Place a receptacle under the Professional Cappuccino Frother.
- ▶ Pour 250 ml of fresh water into a container and add one capful (max. 15 ml) of Auto-Cappuccino Cleaner.
- ▶ Immerse the milk pipe in the receptacle.
- ▶ Turn the selection lever to the milk  or milk foam  position.
- ⇩ ▶ Press the steam button.

HEATING

READY

- ⇩ ▶ Press the steam button again.

STEAM

- ⊖ ▶ Turn the rotary switch until **60 SEC** appears on the display.

**STEAM** - The nozzle and pipe are cleaned.


- ▶ Press any button as soon as the receptacle with the Auto-Cappuccino Cleaner is empty.
- ▶ Rinse the receptacle thoroughly, fill it with 250 ml of fresh water and immerse the milk pipe in it.

- ⇩ ▶ Press the steam button.


- ⊖ ▶ Turn the rotary switch until **60 SEC** appears on the display.

**STEAM** - The nozzle and pipe are rinsed with fresh water.

- ▶ Press any button as soon as the receptacle with the water is empty.

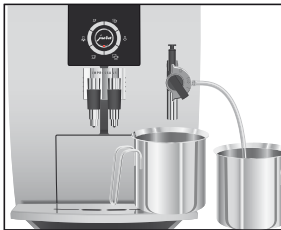

## Disassemble Professional Cappuccino Frother

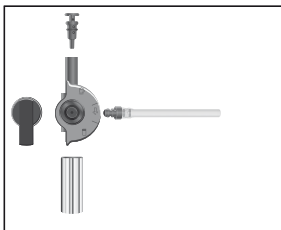

- ▶ Carefully remove the Professional Cappuccino Frother from the Connector System®.

- ▶ Disassemble the Professional Cappuccino Frother into its components.
- ▶ Rinse all the nozzle parts thoroughly under running water.
- ▶ Reassemble the Professional Cappuccino Frother and attach it to the Connector System®.

The cleaning of the Professional Cappuccino Frother is finished.

